

Contents




Component overview Refrigerators and freezers 4 Dishwashers 6 Order specification Refrigerators and freezers 8 Dishwashers 9 Cables/plugs 10 Planning/assembly/removal Refrigerators and freezers 12 Dishwashers 15 Transformer 19


NH	Recess height
BS	Front gap
SWD	Side panel thickness

APL-UK	Bottom edge of work tops
APÜ	Protrusion of work tops
VPEH	Packaging unit

Components/applications

ablum

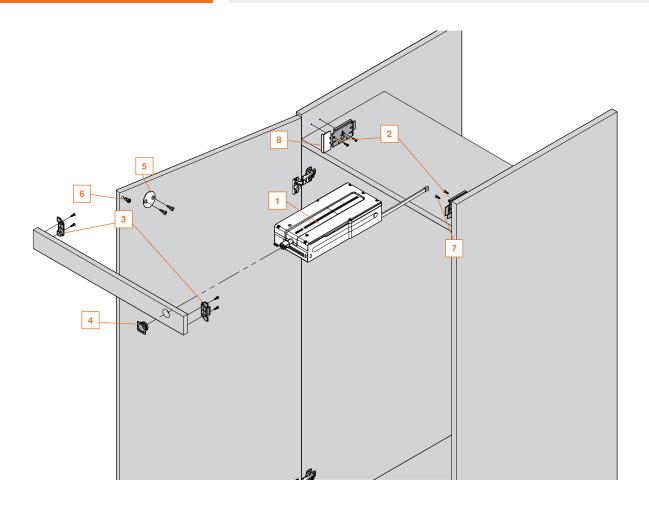

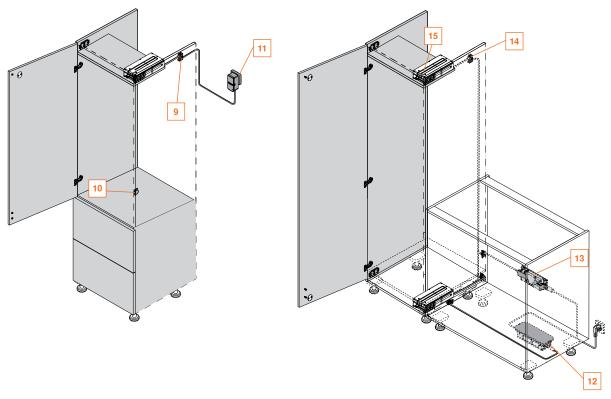

Components

1x



SERVO-DRIVE flex set

1	Drive unit	1x
(M)	Drive unit opens handle-less refrigerators, freezers and	d
	dishwashers	

6	Blum distance bumper	3x
	The Blum distance bumper ensures the required trigger path of 2mm.	er

2	Mounting plate	2x
4.3.	Mounting plate for clipping on the drive unit and the f	ront.


7	Chipboard screw	11x
mm		

3	Front fastening	2x
	Fitting for fastening the front to the side mounting pla	tes.

Cover guarantees a consistent appearance.

Front cover

8	Assembly jig	1x
	Jig for positioning the mounting plate on the side of the cabinet.	

 

9	Connecting node	1x
000	This node establishes the electrical connection between the distribution cable and the transformer.	n

Accessories required depending on installation situation (see page 8):

Blum transformer 72 W

Accessories required depending on installation situation (see page o).	
11	Wall power supply 16 W
	Wall power supply for use with a single SERVO-DRIVE flex drive unit.

13	Transformer unit housing for panel fixing
	If the transformer is to be attached to the panel, then the 'panel' version of the transformer unit housing is used.

		When using more than one SERVO-DRIVE flex drive unit, the 72 W transformer is required.
, , ,	12	Transformer unit housing for cabinet underside fixing
		The transformer is easily and securely stored in the 'base' version of the transformer unit housing.

14	Cable end protector
	The cable end protector is inserted into the ends of the cable.


Synchronisation cable 300 cm
This cable is required for the synchronisation of two SERVO-DRIVE flex units.

Optional accessories:

12 + 13

optional accesse	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,		
10	SERVO-DRIVE switch	15	Wireless receiver
	The switch can optionally be used in combination with the wireless receiver to extend the trigger region.		The receiver is inserted into the drive unit tool-free and synchronised with the SERVO-DRIVE switch via wireless connection.

Components/applications

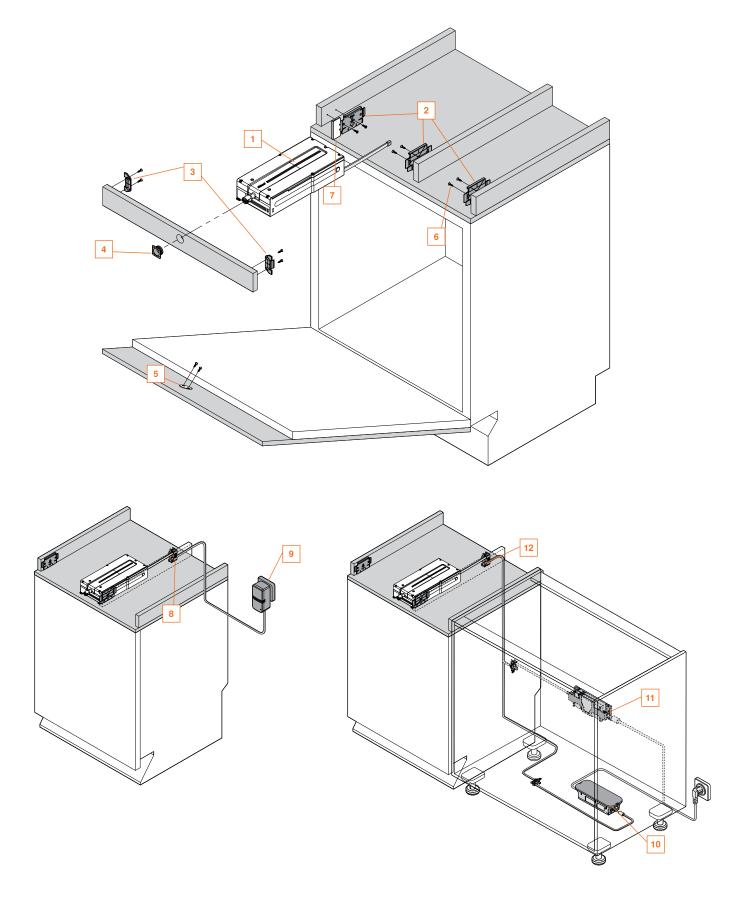

Components



SERVO-DRIVE flex set



5	Catch plate	1x
	Catch plate for assembly on the front. This guarantees secure closing when opened unintentionally.	


2	Mounting plate	2x
4.3.	Mounting plate for clipping on the drive unit and the	front.

6	Chipboard screw	11x
mm		

3	Front fastening	2x
	Fitting for fastening the front to the side mounting plates	S.

7	Assembly jig	1x
	Jig for positioning the mounting plate on the side of the cabinet.	е



 

Optional accessories for dishwashers

9	Wall power supply 16 W
	Wall power supply for use with a single SERVO-DRIVE flex drive unit.

11	Transformer unit housing for panel fixing
	If the transformer is to be attached to the panel, then the 'panel' version of the transformer unit housing is used.

10 +11	Blum transformer 72 W
	When using more than one SERVO-DRIVE flex drive unit, the 72 W transformer is required.

12	Cable end protector
	The cable end protector is inserted into the ends of the cable.

10	Transformer unit housing for cabinet underside fixing
	The transformer is easily and securely stored in the 'base' version of the transformer unit housing.

8	Connecting node	1x
	This node establishes the electrical connection between the distribution cable and the transformer.	en


Additionally required for dishwashers

Additionally roqu	ii ou ioi dioiiwaoiioio	
2	Mounting plate	1x
	Mounting plate for clipping on the drive unit and the fro	ont.


Order specification

Ablum

Refrigerator up to NH 178 cm, freezer up to NH 158 cm:

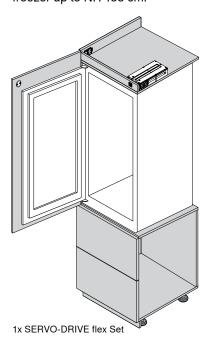

Freezer ≥ NH178:

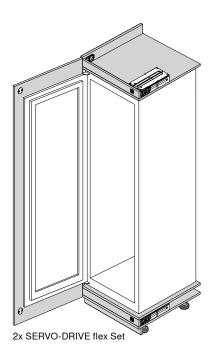

Fridge/freezer combinations:




	Ordering for one unit		
4		VPEH	
	SERVO-DRIVE flex set	1x	Z10C500A
	Wall power supply 16 W (see table on page 10)	1x	Z10NA20(xy)F
*			

	Ordering for two units		
		VPEH	
	SERVO-DRIVE flex set	2x	Z10C500A
	Blum transformer 72 W (application for more than one unit, see table on page 10)	1x	Z10NE020x
	Flex	10x	Z10M200x
	Transformer unit housing for cabinet underside fixing	10x	Z10NG000
	Alternative: Transformer unit housing for panel fixing	10x	Z10NG120
	Synchronisation cable 300 cm, R7035 light grey (only for freezers with a height of 178 cm)	1x	Z10K300A
A	Connecting node	50x	Z10V1000.01
	Black distribution cable for cutting to size		Z10K300A
	Cable end protector	100x	Z10K0008
	Cable holder	100x	Z10K0009
	Recommended for the fridge/freezer combination:		
	SERVO-DRIVE switch	20x	21P5020
*	Wireless receiver	20x	Z10C5007

Order specification



Dishwashers:

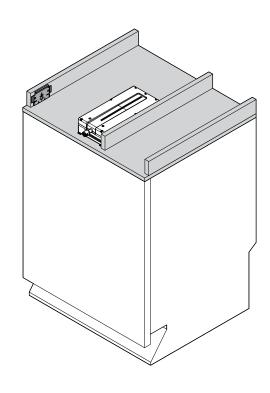

	Ordering for dishwashers		
		VPEH	
	SERVO-DRIVE flex set drive unit	1 x	Z10C500A
	Wall power supply 16 W (see table on page 10)	1 x	Z10NA20(xy)F
	Additional mounting plate for use with dishwashers	50 x	Z10C5005

* Set components can also be ordered individually		
	VPEH	
SERVO-DRIVE flex drive unit	10	Z10C5000
Catch plate	50x	Z10C5004
Mounting plate	50x	Z10C5005
Front fastening	50x	Z10C5006
Front cover	50x	Z10C5009
Blum distance bumper	100x	993.0530
Assembly jig	1x	Z10C500-18
Chipboard screw	100x	609.1500


Order specification



Transformer and wall power supply:

	Flex		
	Countries		
S	Flex Europe	10 pieces	Z10M200E
	Flex CH	10 pieces	Z10M200C
	Flex US, CA	10 pieces	Z10M200U
	Flex JP	10 pieces	Z10M200J
	Flex BR	10 pieces	☎ Z10M200S.01
	Flex UK	10 pieces	Z10M200B
	Flex DK	10 pieces	Z10M200D
	Flex IL	10 pieces	Z10M200I
	Flex AU	10 pieces	Z10M200K
	Flex CN	10 pieces	Z10M200N
	Flex AR	10 pieces	Z10M200A
	Flex IN	10 pieces	☎ Z10M200H
	Flex CL	10 pieces	Z10M200L
	Flex TW	10 pieces	Z10M200T
	Flex ZA	10 pieces	Z10M200Z
	Flex Europe without plug	10 pieces	Z10M200E.OS


Blum transformer		
72 W	10 pieces	
Language packages – installation instructions and instruction leaflet		
A DE, EN, FR, IT, NL		Z10NE020A
B DA, EN, FI, NO, SV		Z10NE020B
C EL, EN, HR, SL, SR	, TR	Z10NE020C
D EN, ES, FR, IT, PT		Z10NE020D
E CS, HU, SK, PL		Z10NE020E
F BG, ET, LT, LV, RO,	RU	Z10NE020F
G EN, ES, FR, (US, CA	A)	Z10NE020G
H EN, ZH		Z10NE020H
Only one Blum transfor cable!	mer permitte	ed per distribution

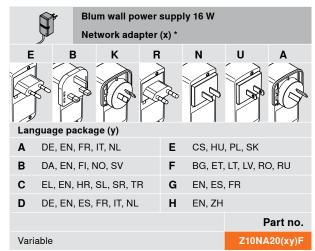



^{*}Not permitted for more than one drive unit!

Optional accessories for refrigerators and freezers to extend the trigger region	
SERVO-DRIVE switch	21P5020
Wireless receiver	Z10C5007

Planning and assembly for refrigerators and freezers

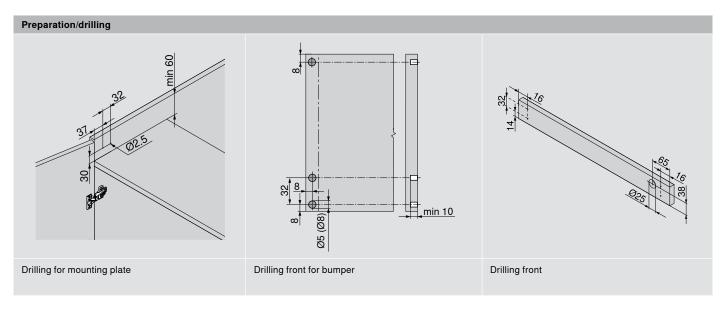


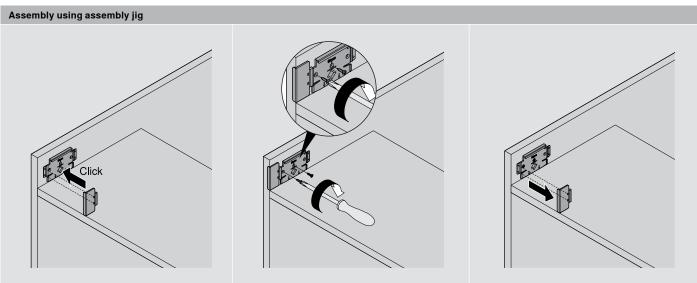


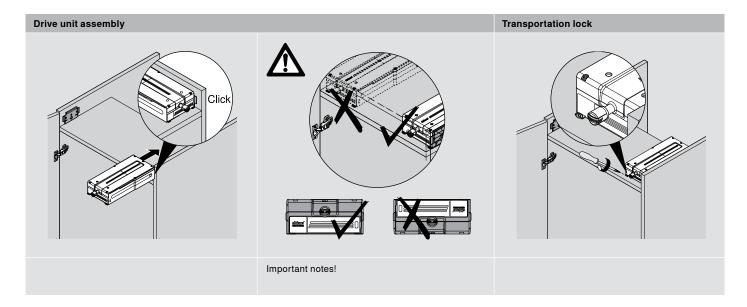


Assembly for refrigerators and freezers

ablum

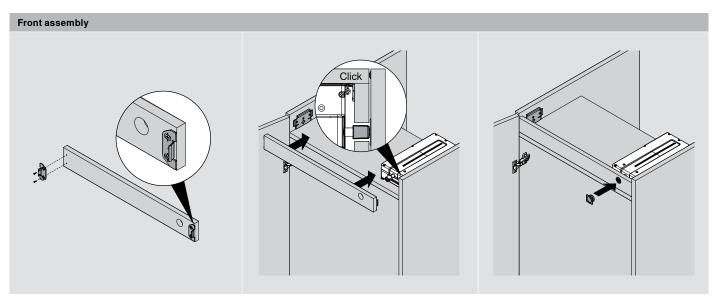


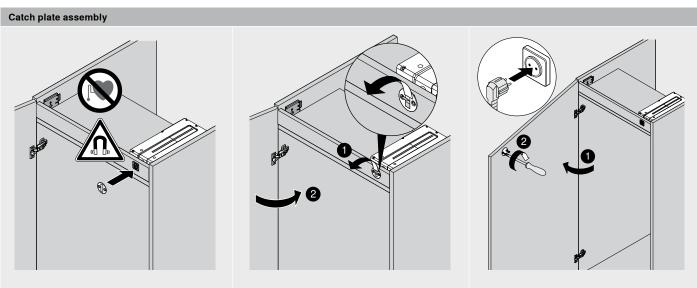


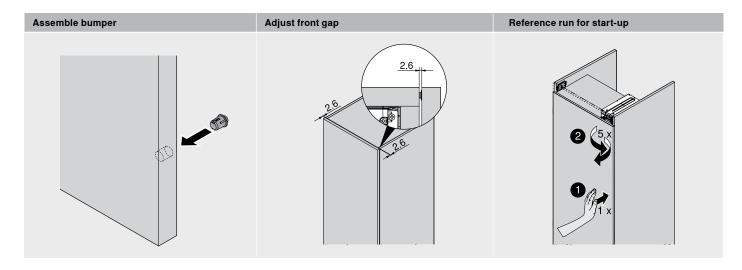


Removal for refrigerators and freezers


ablum

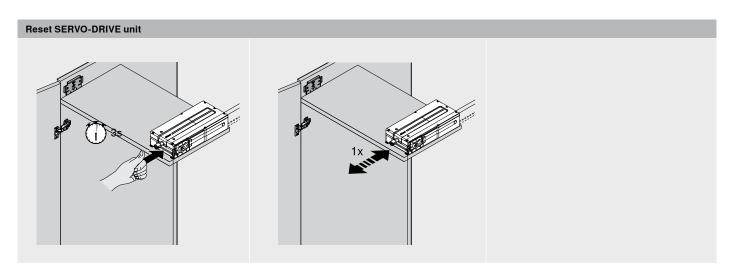


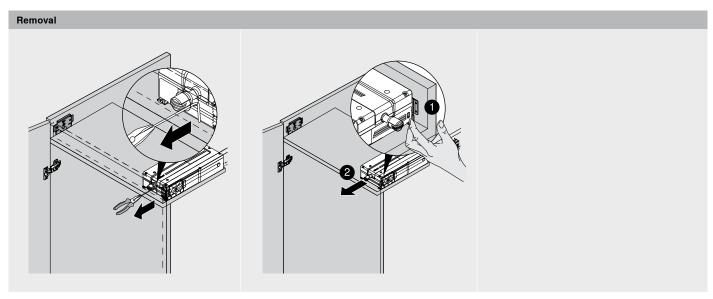

Radio switch assembly (optional)

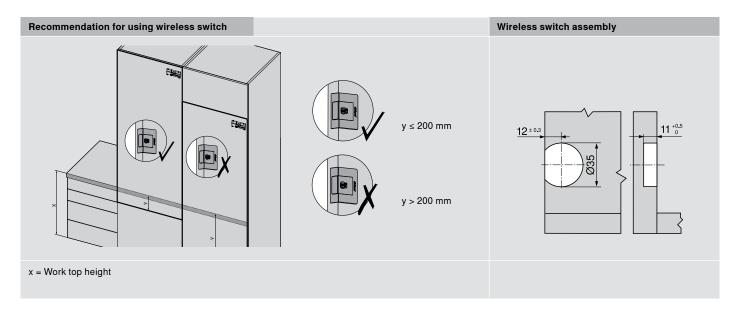


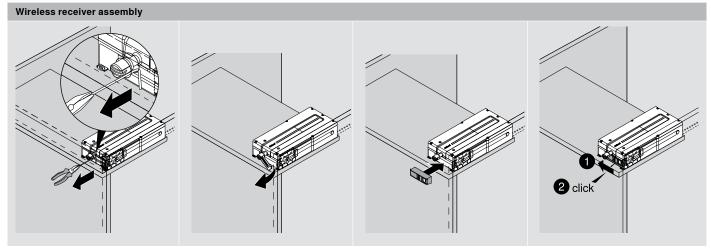


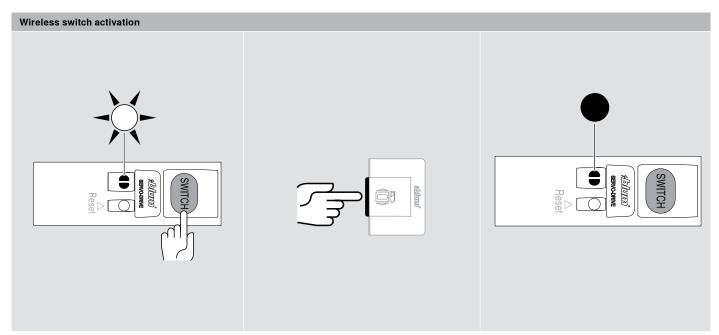

Installation options



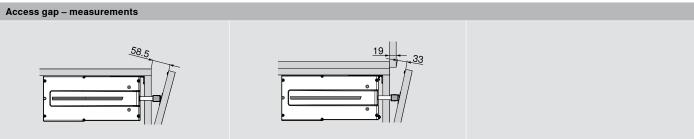

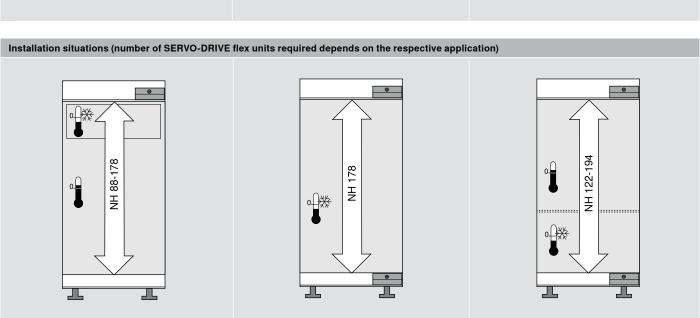


General notes




If the door of the device is left open for a relatively long time, for example when putting away shopping, a vacuum may be created inside the refrigerator or freezer once it has been closed. This may result in it not being possible to open the door of the device for a few seconds. This vacuum normally disappears after a short amount of time and the opening function becomes fully operational once again.

Dishwasher planning and assembly




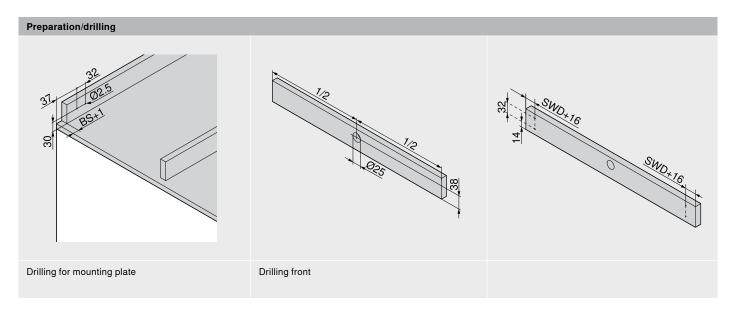


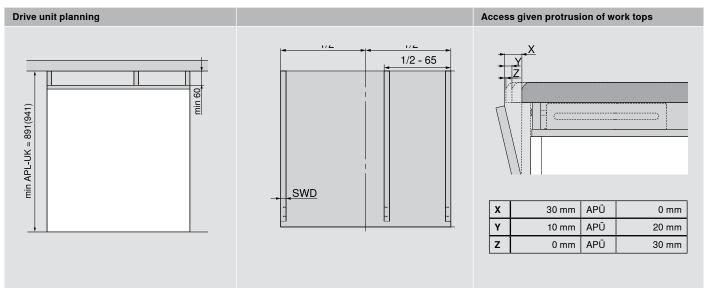


16

Dishwasher assembly

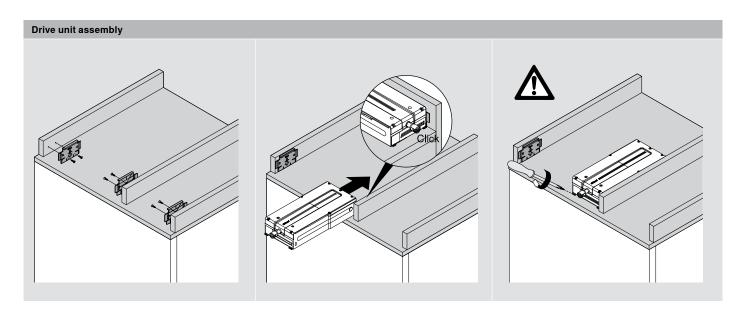


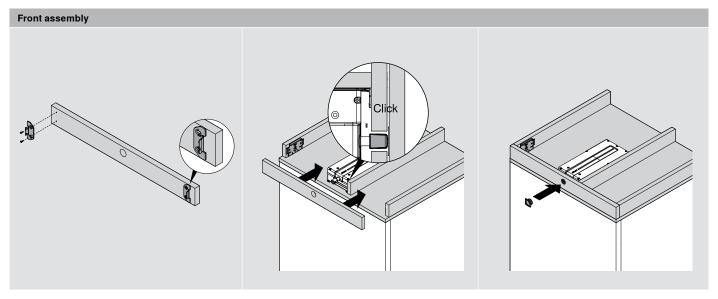


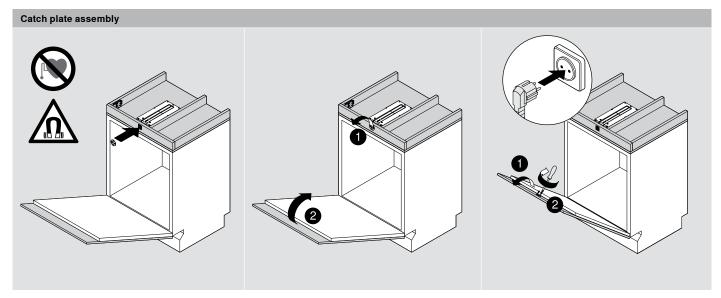







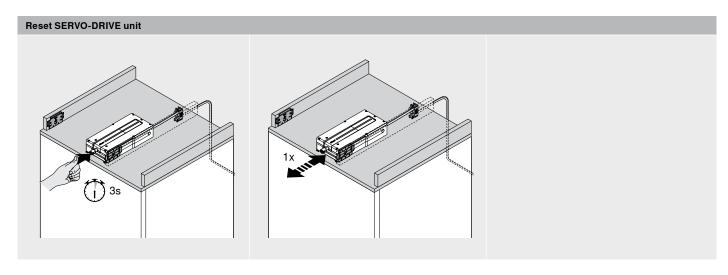


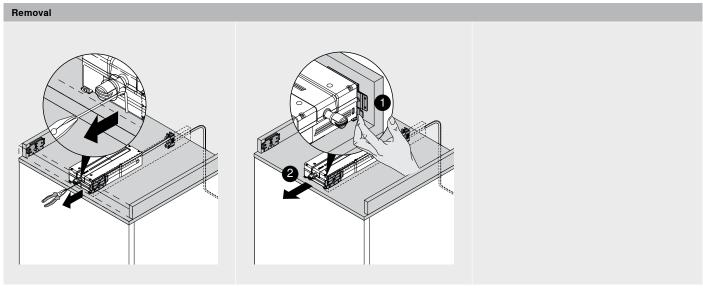


Transformer assembly

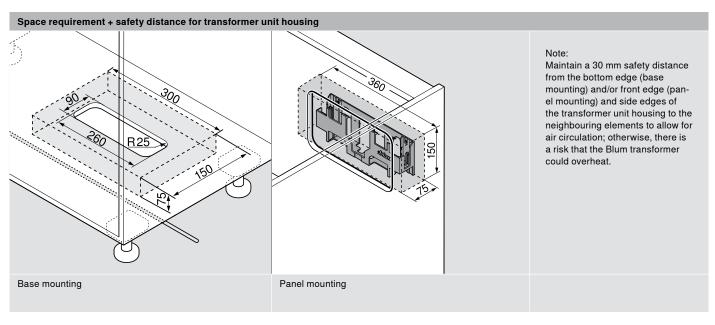

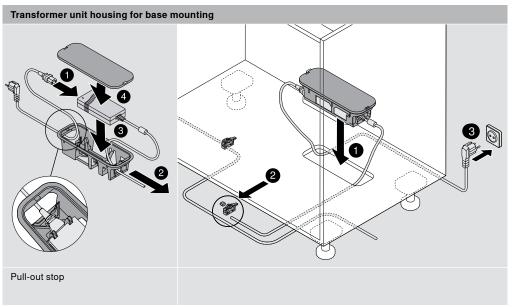

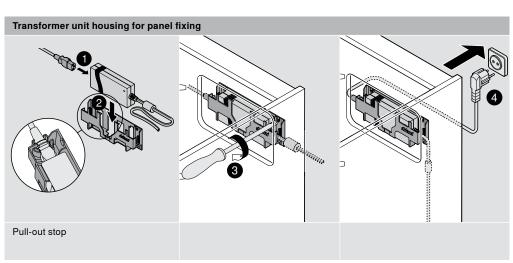

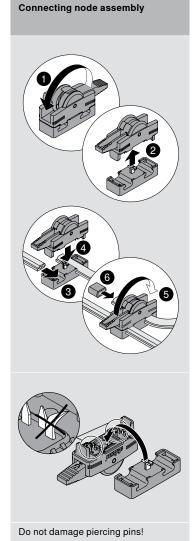

Cabling



